


DMXCAT RDM RJLED2

The user interface has 9 independent screens showing all sections that control et setup the unit. The document is not designed to replace the DMXcat manual but to explain some particularities of Robert Juliat RJLED2 firmware platform that seats in the SULLY/ARTHUR range.

BASIX INFO – PRO INFO

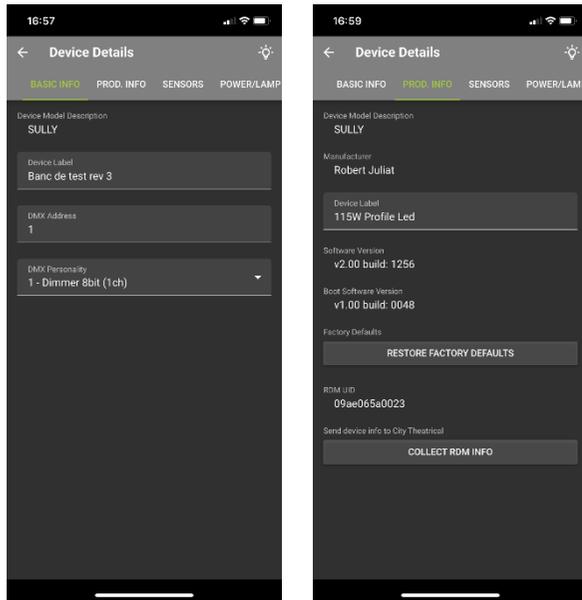

SENSORS


The range of the values are shown in green. If available, the min and max value are shown with yellow tags and in clear at the bottom of the dial.

We have 4 categories of sensors:

Temperature: CPU and Led Fan Speed: CPU and Led
PSU: 50V, 12V, 5V Driver: Voltage and Current when Led is on



POWER LAMP

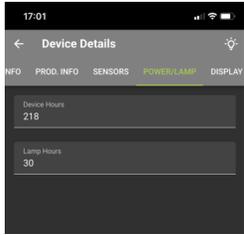


DISPLAY



If set to 0 all status Leds will be off as the display on Arthur. Another value dims only the display.

CONTROL

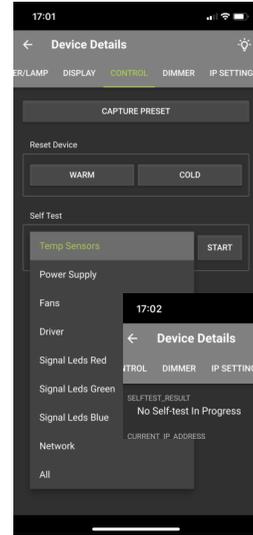


Capture preset is not an available function.

In Self Test it is possible to launch by pressing Start a specific test routine.



8 options are available.

The result is shown in the Manufacturer Settings screen

DIMMER

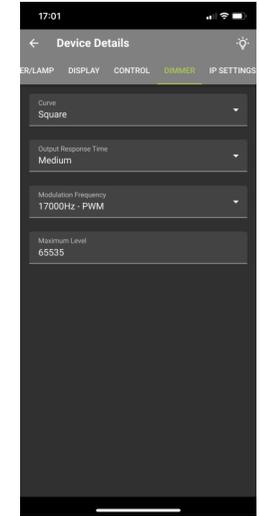

IP SETTINGS

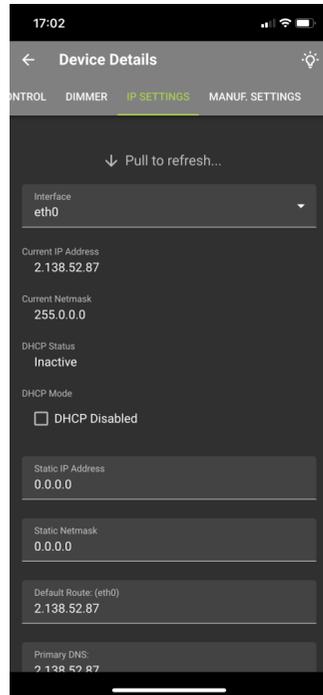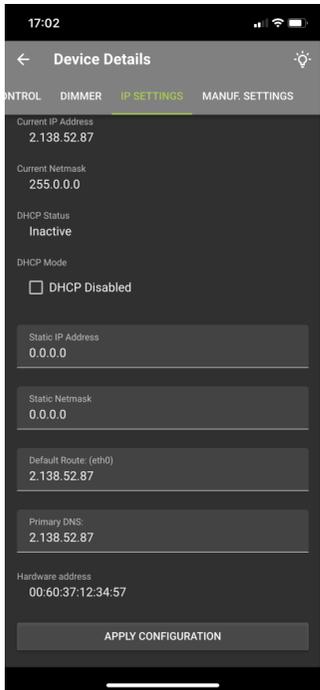

Primary DNS is your IP Address by default

After setting another IP Address and Netmask you have to press APPLY CONFIGURATION and then Pull down the screen to refresh the data.

MANUFACTURER SETTINGS

